

TOOLING-LINE


Forets à centrer plats

Zentrierflachbohrer

Centering flat drills

90°

1200 / 2200

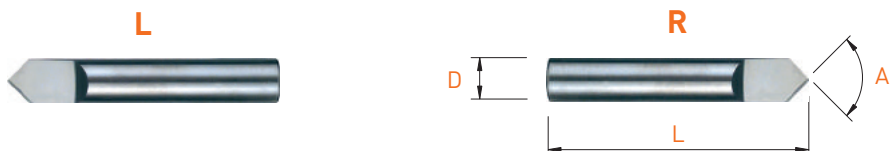


MD VHM HM			L	R
A	D	L	Art. N°	Art. N°
90°	3	17	1200-317	2200-317
90°	3	38	1200-338	2200-338
90°	4	40	1200-440	2200-440
90°	5	50	1200-550	2200-550
90°	6	50	1200-650	2200-650
90°	8	58	1200-858	2200-858
90°	10	66	1200-1066	2200-1066
90°	12	73	1200-1273	2200-1273

Forets à centrer hélicoïdaux
 Zentrierspiralbohrer
 Centering twist drills

90°

1500 / 2520

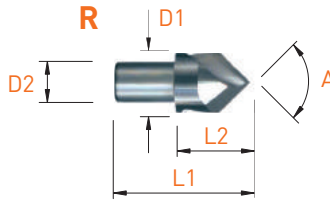


A	D1	D2	L1	L2	HSS		MD / VHM / HM	
					L	R	L	R
Art. N°	Art. N°	Art. N°	Art. N°	Art. N°	Art. N°	Art. N°	Art. N°	
90°	5	4	17	8	1500-5-HSS	2520-5-HSS	1500-5	2520-5
90°	7	5	17	8	1500-7-HSS	2520-7-HSS	1500-7	2520-7
90°	10	6	22	10	1500-10-HSS	2520-10-HSS	1500-10	2520-10
90°	12	8	26	12	1500-12-HSS	2520-12-HSS	1500-12	2520-12

Forets à centrer hélicoïdaux
 Zentrierspiralbohrer
 Centering twist drills

120°

1510 / 2530

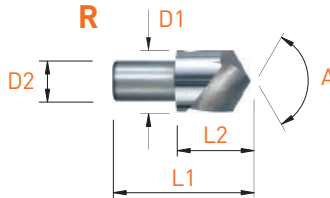

A	D1	D2	L1	L2	MD / VHM / HM	
					L	R
Art. N°	Art. N°	Art. N°	Art. N°	Art. N°	Art. N°	
120°	5	4	17	8	1510-5	2530-5
120°	7	5	17	8	1510-7	2530-7
120°	10	6	22	10	1510-10	2530-10
120°	12	8	26	12	1510-12	2530-12